



HOW TO SWITCH THE MODES ON GROM-USB2



(for CD changer emulation only, don't use it for XM/SAT emulation*)

Please read this part entirely before attempting to change the modes. You will need to perform all the steps below quickly with 1-2 seconds interval.

Depending on your GROM firmware version, GROM-USB2 can work in two or three modes: **USB, AUX or iPod.**

STEP 1: When you need to switch between the MODES, first you will need to enter into the "MODE CHANGING" state on your car stereo. There are two possible scenarios:

1. The stereo is already in the CD changer mode (GROM USB is activated). **Press FM/AM - > wait 1-2 second -> press CD (DISC).**
2. The stereo is in any other mode (FM, SAT, etc...): **press CD (DISC) -> wait 1-2 second - > press FM/AM -> wait 1 second -> press CD (DISC).**

STEP 2: You will hear the voice announcing the currently playing mode (USB, AUX or iPod). To switch to the next mode, press **Next Track** button quickly (,  or respective button on your car stereo) while the voice prompt is announcing. The next mode will be announced right after. If you need to select another mode, simply press **Next Track** button again and so on until you select the desired mode.

Note: If you do not hear the voice announcement, it means that you did not press quickly enough and the adapter is not in the "MODE CHANGING" state anymore. Please perform STEP 1 again.

Once you hear the desired mode announcement, simply wait for 1-2 seconds and the adapter will start operating in that mode.

* GROM uses CD changer emulation for most of the supported car makes except Nissan/Infiniti with CAT/SAT printed on the stereo, Ford/Lincoln/Mercury (US), and Honda/Acura 03 and up with the special XM firmware. If you have any questions please contact tech support at <http://gromaudio.com/support.html>