

GROM-USB2P - USB/iPod/Bluetooth/AUX/Android adapter for Nissan/ Infiniti SAT Emulation

For proper STEERING WHEEL CONTROL operation:

While playing USB/iPod, press and hold PRESET 1-6 one at a time until you hear a beep sound.

Preset C will contain AM/FM radio presets

Nissan/Infiniti Vehicles that have PRESET A * B * C button

*No voice prompts will be heard for these vehicles, but iPod/Auxiliary/USB will be shown on the display.

 
*Preset A then press Radio button until in XM mode = GROM USB mode

 
*Preset B then press Radio button until in XM mode = GROM IPOD mode

*Preset C then press Radio button until in XM mode = GROM AUX mode

In USB or iPod mode the TUNE/FOLDER knob or button will control folder selection or playlist selection.

SEEK TRACK buttons control track selection. Presets 1-6 have no function.

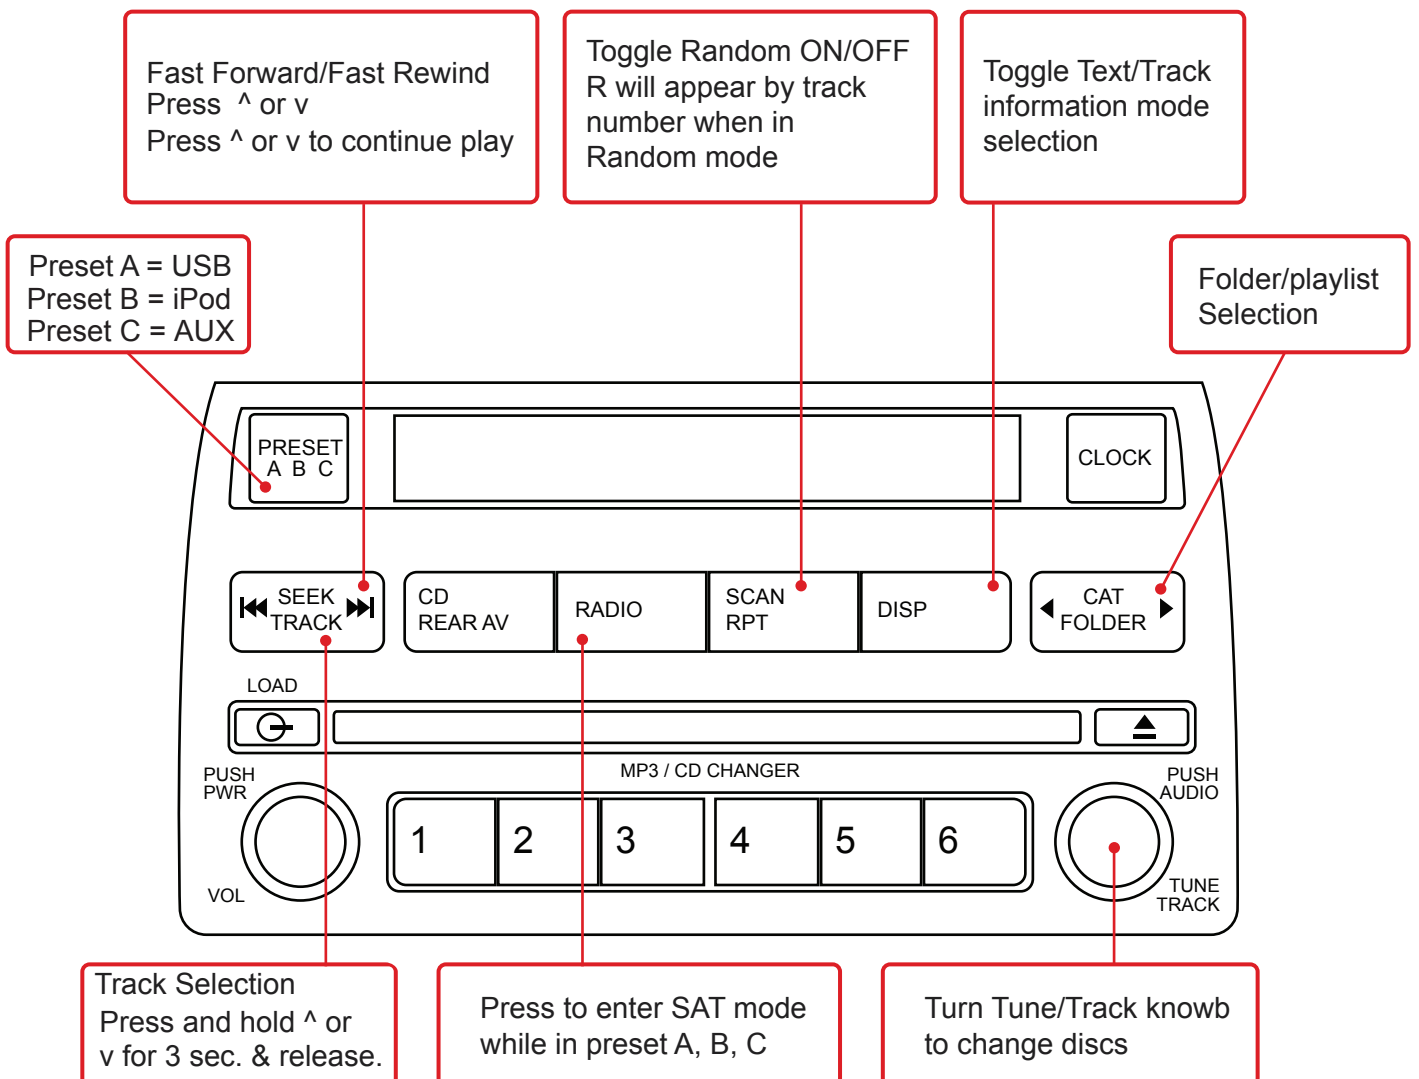

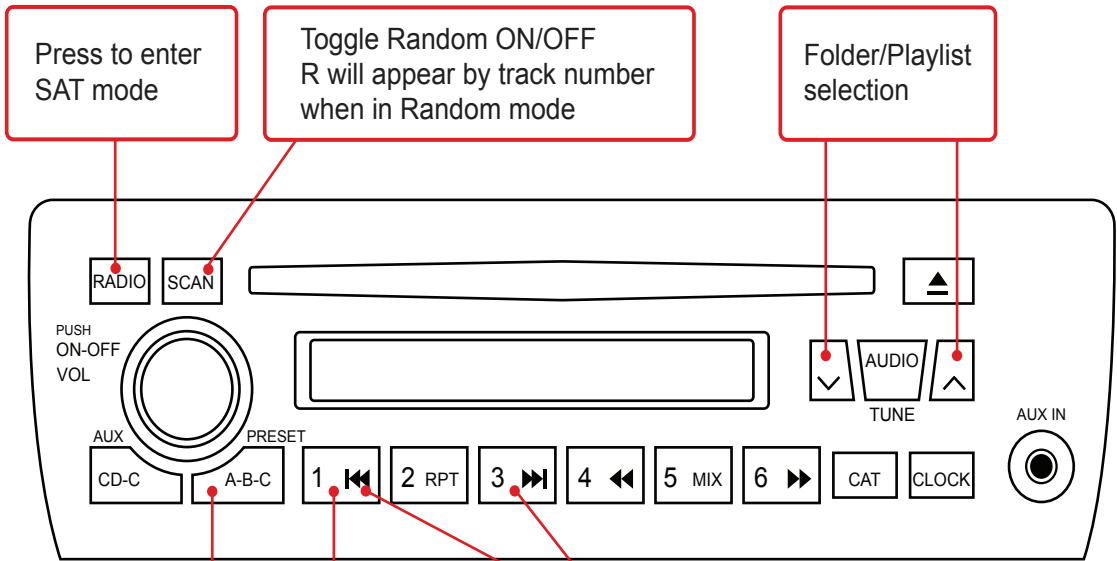

Preset A = USB.
 Preset B = iPod
 Preset C = AUX

 
Fast Forward/
 Fast Rewind
 Press ^ or v
 to continue play

Track Selection, Prev/Next
 Press and hold ^ or v
 for 3 sec. & release.

Fast Forward/Fast Rewind.
 Press ^ or v to continue play

Toggle Text/Track
 information mode selection

Track Selection
 Press & hold
 for 3 sec

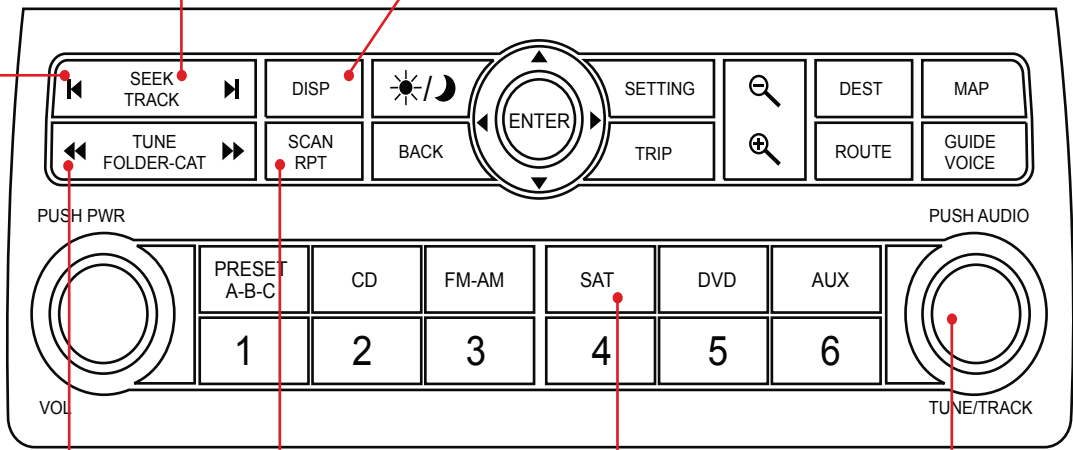

Folder/playlist
 Selection

Toggle Random ON/OFF
 R will appear by track number
 when in Random mode

Press to enter SAT mode
 preset A=USB B=iPod

Turn Tune/Track knob
 to change discs/folders

NISSAN/INFINITI Vehicles that do not have PRESET A * B * C button

XM 1 = USB flash drive mode (USB stick)


XM 2 = iPod (if optional iPod cable connected) or AUX mode. If using AUX mode please be sure the iPod is disconnected from the unit.

(^ TUNE FF REW v) button controls folder or playlist selection

(^ SEEK TRACK v) button controls track selection

The (DISP) button will control MP3 text from USB flash drives.

 Presets 1-6 have no function

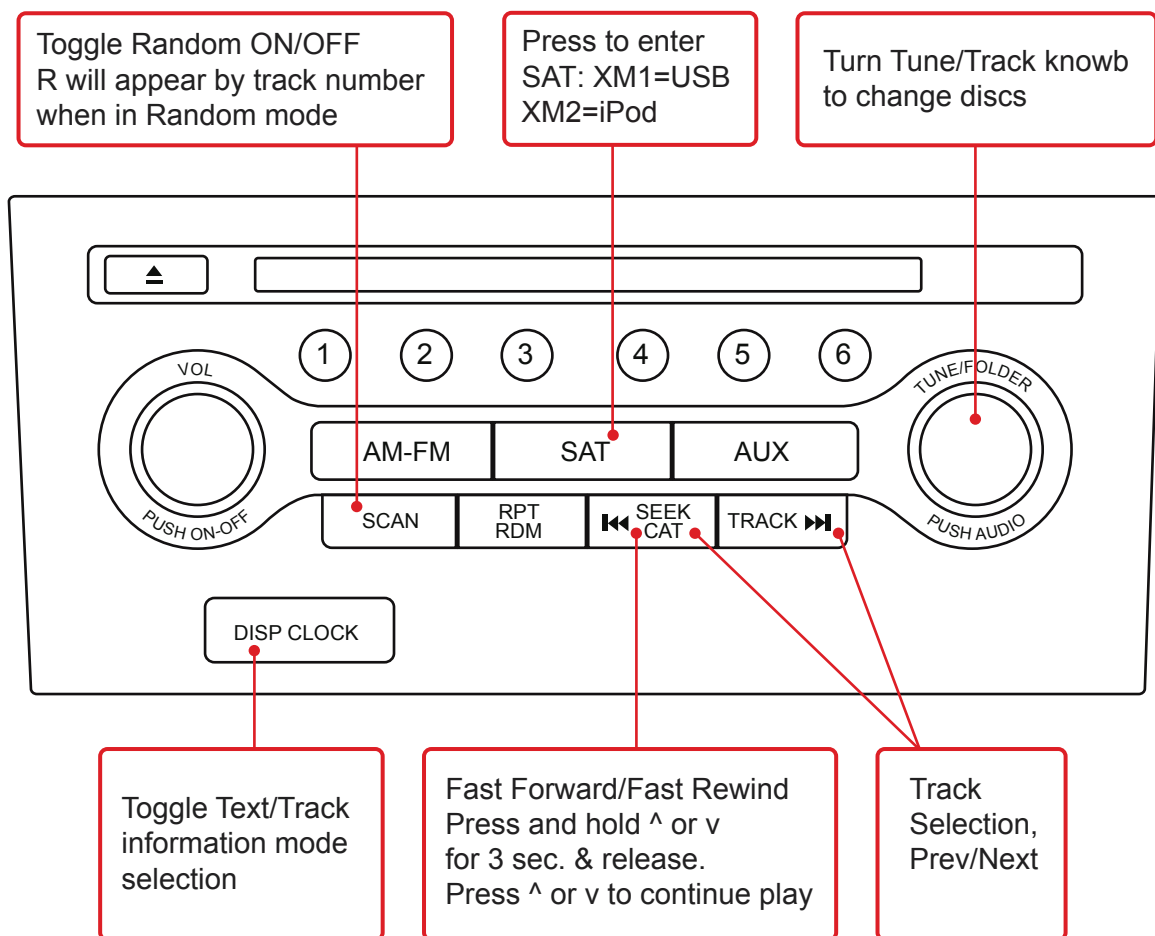

*If SCAN button is missing on a stereo- press and hold Seek Track >| button until it beeps to enable Random.

