

OPERATION INSTRUCTIONS FOR MAZDA 08-12 WITH MP3 STEREO

Mazda 3, Mazda 5: to activate GROM-USB2i adapter please press MEDIA button.

Mazda CX7, Mazda 6: to activate GROM-USB2i adapter please press AUX button.

SWITCHING BETWEEN USB/Android®, IPOD® AND AUX MODES

STEP 1: When you need to switch between the MODES, first you will need to enter into the “MODE CHANGING” state on your car stereo. There are two possible scenarios:

1. The stereo is already in the CD changer mode (GROM USB is activated). **Press FM/AM** -> wait 1-2 second -> **press MEDIA/AUX**
2. The stereo is in any other mode (FM, SAT, etc...): **press MEDIA/AUX** -> wait 1-2 second -> **press FM/AM** -> wait 1 second -> **press MEDIA/AUX**

STEP 2: You will hear the voice announcing the currently playing mode (USB, AUX or iPod). To switch to the next mode, press **Next Track** button quickly (> , ^ or respective button on your car stereo) while the voice prompt is announcing. The next mode will be announced right after. If you need to select another mode, simply press **Next Track** button again and so on until you select the desired mode.

Once you hear the desired mode announcement, simply wait for 1-2 seconds and the adapter will start operating in that mode.

HOW TO CONTROL THE MUSIC

TRACK ^ & TRACK v will control tracks.

Mazda 3, Mazda 5: DISC ^ & DISC v will select a particular playlist (1-99).

Mazda CX7, Mazda 6: Folder^ & Folder v will select a particular playlist (1-99).

The presets of the radio will not function with the GROM unit.

Instructions for iPod® control:

When the display shows:

LIST 1 = iPod simple mode (manual mode)

LIST 2 = Continue to play what was playing on Simple Mode if previously in Simple Mode. If you desire to listen to the first playlist then you must **DISC ^** to go to LIST 3 and then **DISC v** to get to your first playlist when previously using Simple Mode.

LIST 3 = 2nd playlist

LIST 4 = 3rd playlist

and so on...

Instructions for USB flash drive and Android® phone:

When the display shows:

LIST 1 = Folder 1 or Playlist 1

LIST 2 = Folder 2 or Playlist 2

LIST 3 = Folder 3 or Playlist 3

LIST 4 = Folder 4 or Playlist 4

and so on...

TUNE PUSH AUTO-M DISP ESN button must be pressed to show desired text. Continue to press until desired information is shown. Radio will not show text for iPod when in Simple Mode.