




## Posi-Tap Installation Instructions

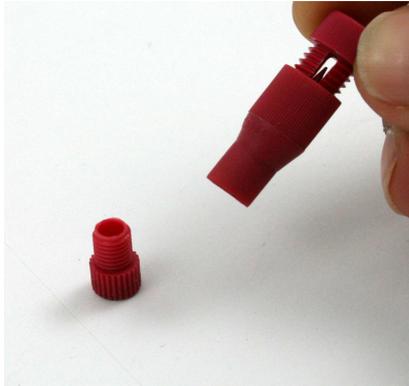


Here you can see the point that punctures the wire to be tapped. Go ahead and remove both the large and small cap.

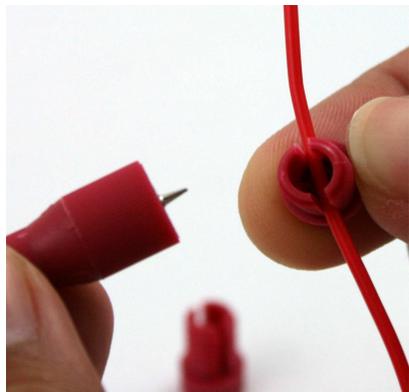


Insert wire, (referred as "HOT") that is to be tapped - the one that comes out of your stereo main harness, down the gap in the cap as far as it will go.

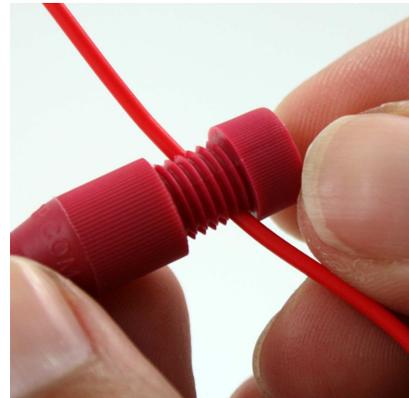

This is when the tap is started onto the threads of the larger cap. Keep the posi-tap straight so the pin is centered on the wire when it contacts the wire.

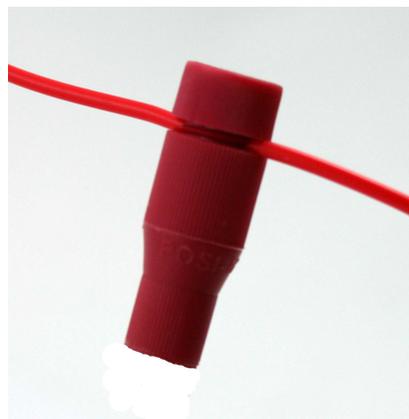


Continue to thread until wire is tightly tapped.

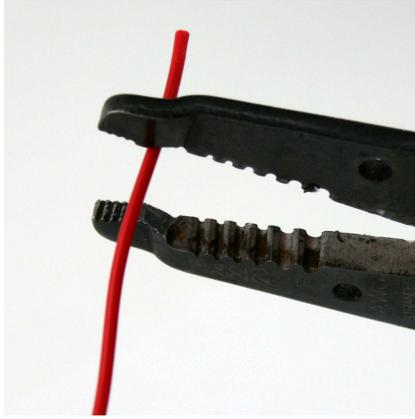


Now take the single wire that comes from your GROM vehicle specific harness and strip it. Strip the wire the correct amount according to the posi-tap product. Make sure not to nick or cut any strands.

**Tip:** It is easy to break or nick a wire if you're not careful. It is advised to choose the next larger size to strip, which avoids nicking a wire. You might want to practice stripping if you haven't done it before. Many kinds of low cost strippers will do a job if you are careful.

If you cut a wire strand, you should cut the wire off and strip it again.

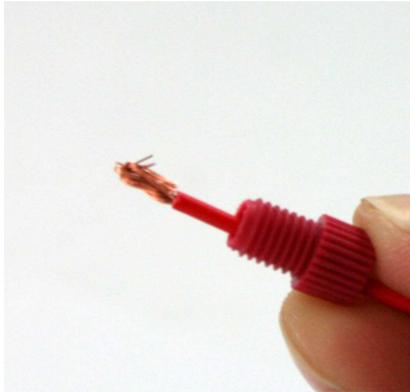

Unscrew the smaller cap and insert striped wire end through it, making sure all strand get through. Then fold wires over to one side.

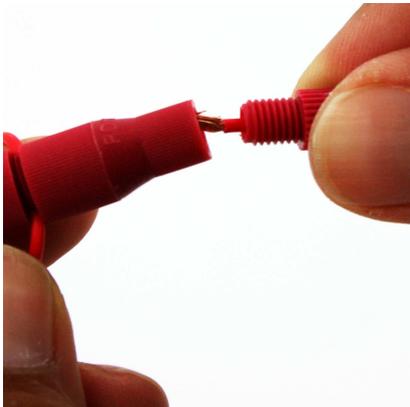

Place the wires to one side of the metal core, while pushing and turning until the wires catch. As soon as they do, screw tightly while making sure no strands retreat back into the cap.



Finished posi-tap installation.