


# 2008 Honda Goldwing, ABS


1. Remove the seat bolts from the passenger handles on each side




2. If you have heated seats  
disconnect the heating wires  
under the seat.

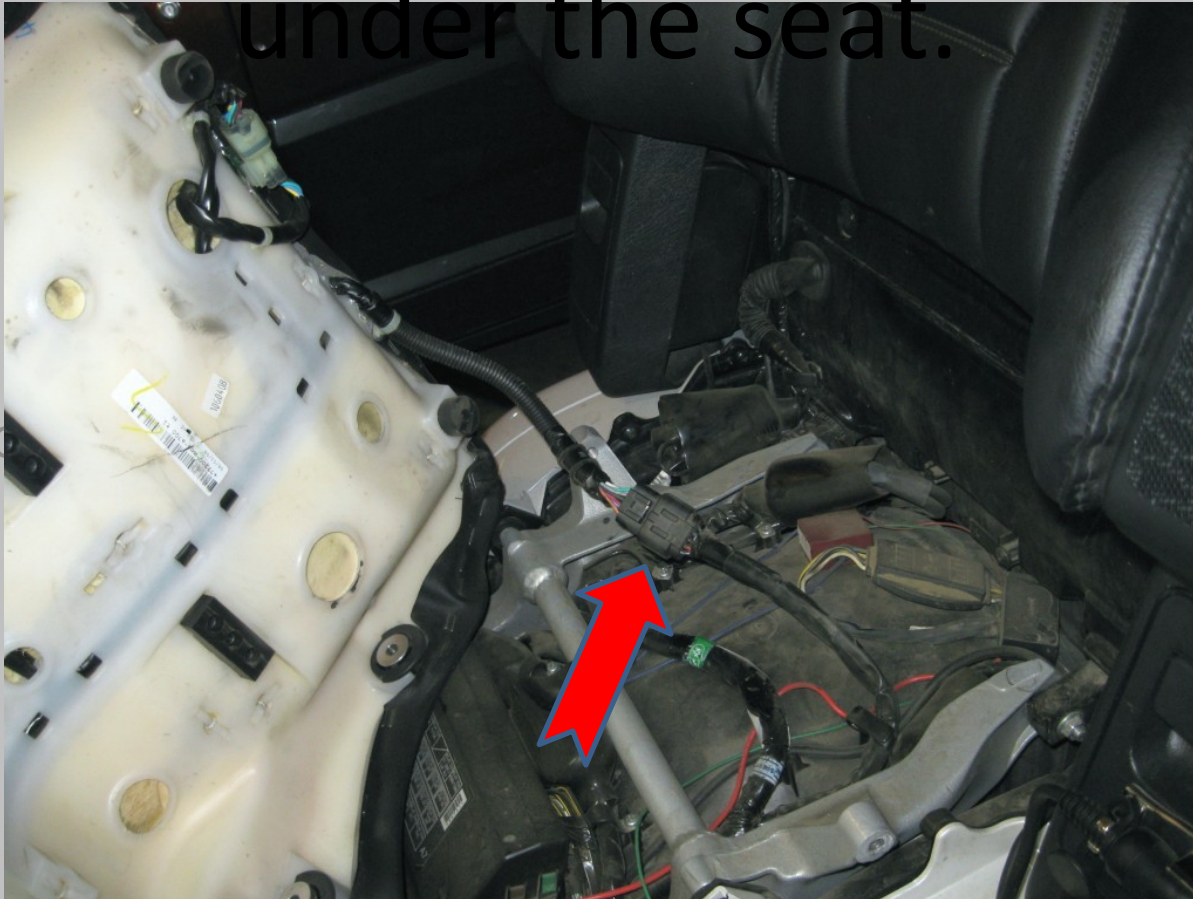

3. Locate the CD Player wiring harness/ plug in group next to fuse block.

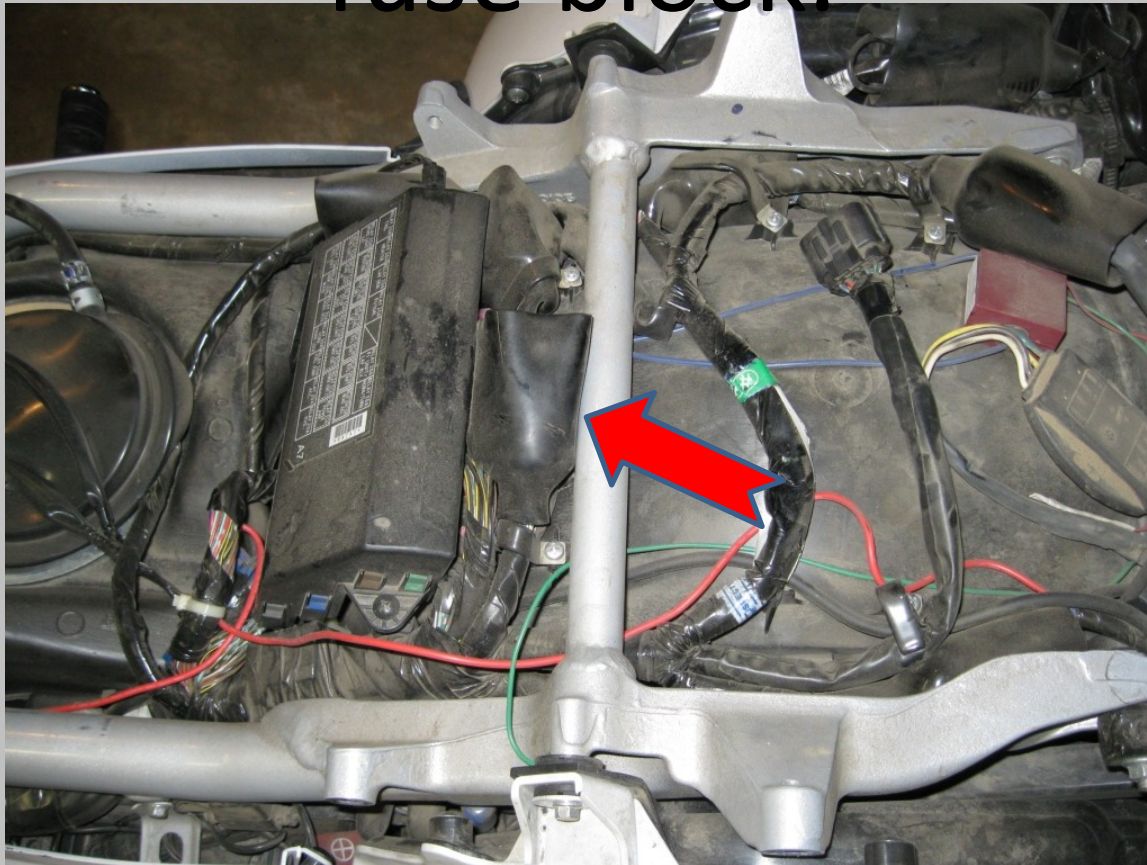



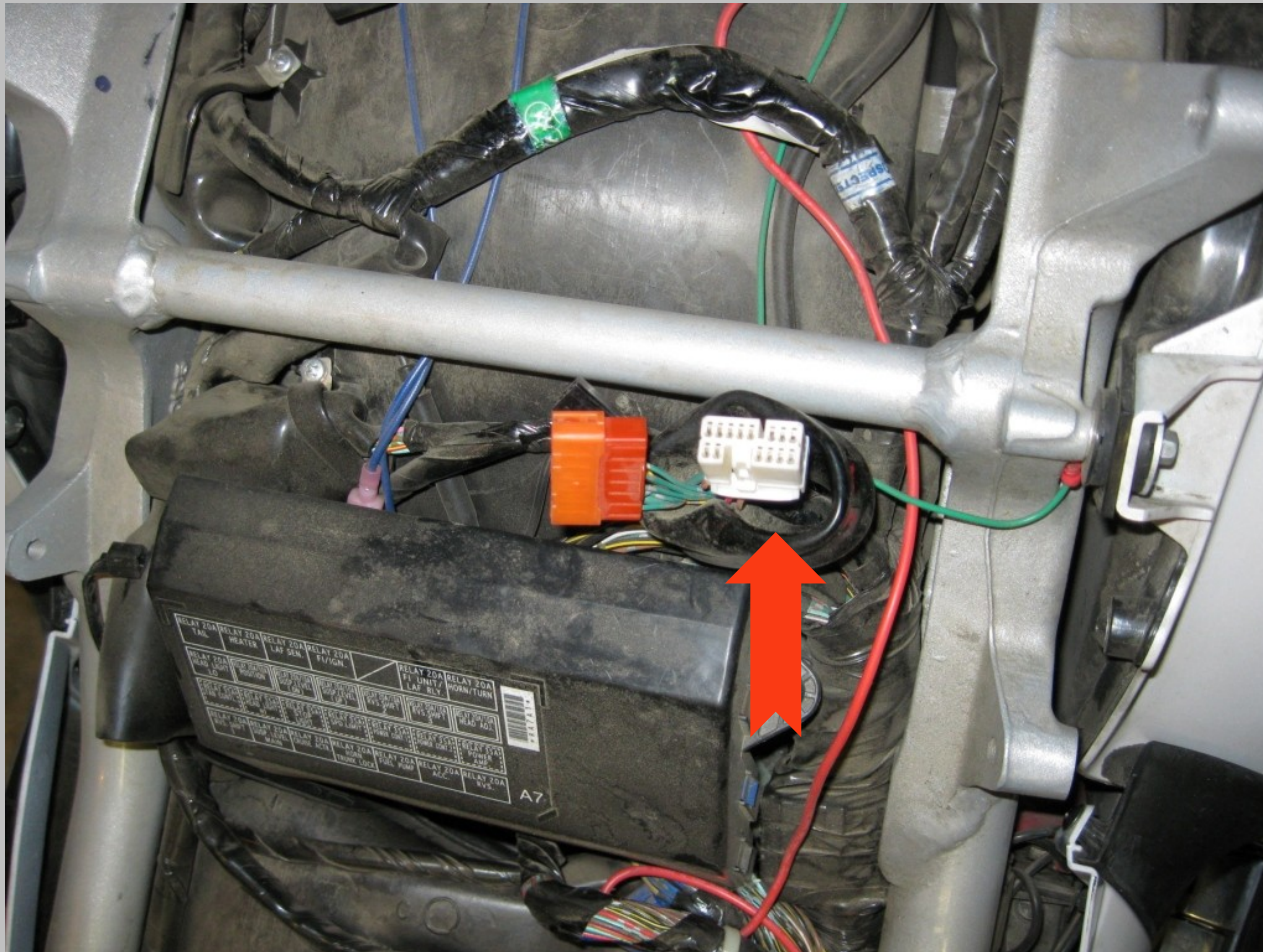


28.7.09

4. Tape up the male plug on your HON1M cable because it will not be used, unless you have XM



5. Plug the female end of the HON1M cable into the Goldwing

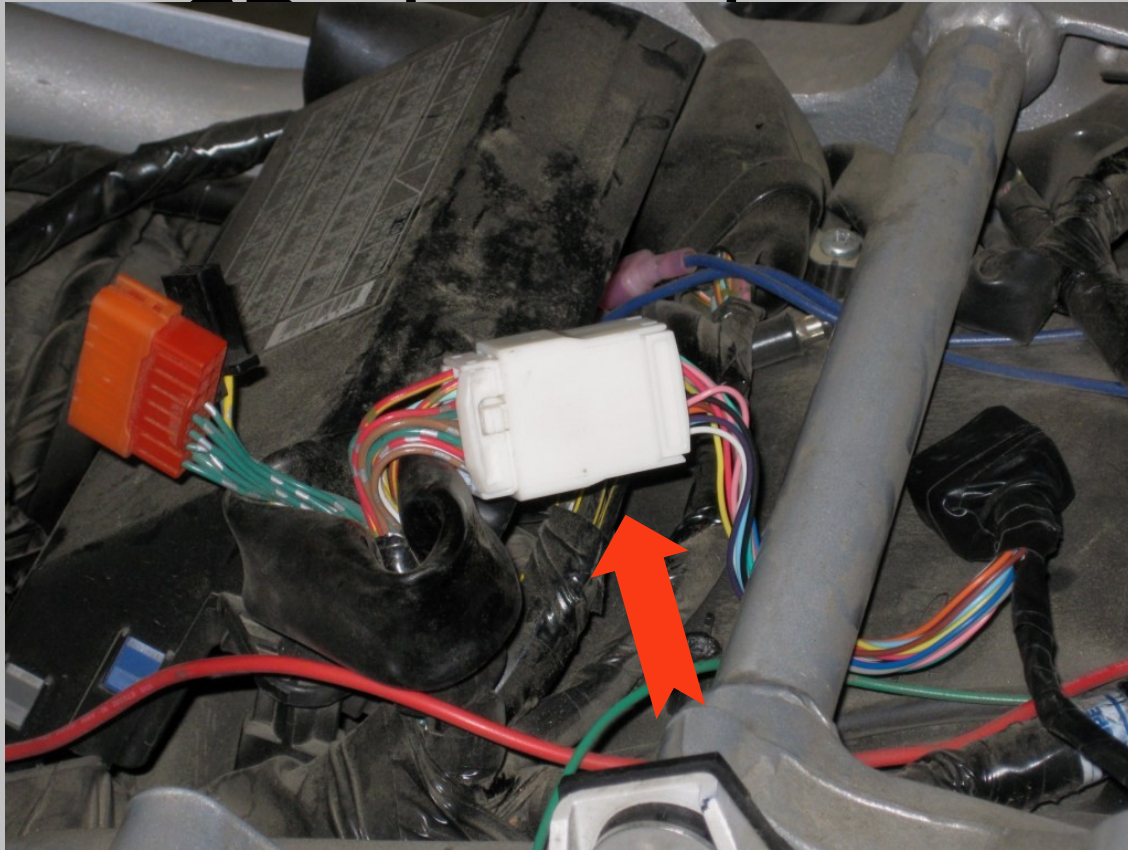



6. Plug other end of the HON1M cable in to the GROM unit.



## 7. Mount the GROM unit just in front of the fuse block.





8. I Located my IPOD in the CD player storage area in trunk. You could use one of the front pockets



9. Drill a hole just big enough for the IPOD to GROM cable to pass through




10. Then tread the GROM end of the cable through the hole.





# 11. Route the cable along existing wiring harness and plug in to the GROM unit

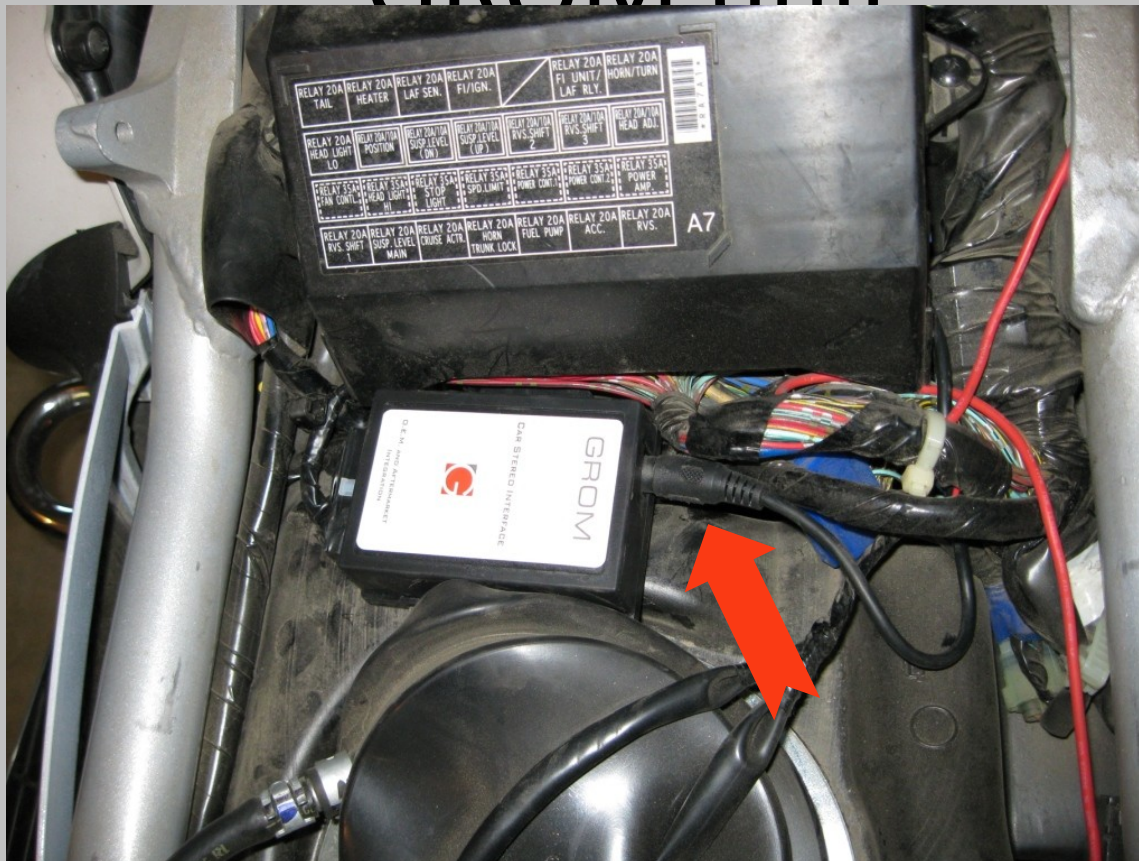

12. Now you are ready to plug in your IPOD and power up the CD player on your Goldwing Audio




13. Turn the key on and punch the CD button on your Goldwing





14. This is what you should see.

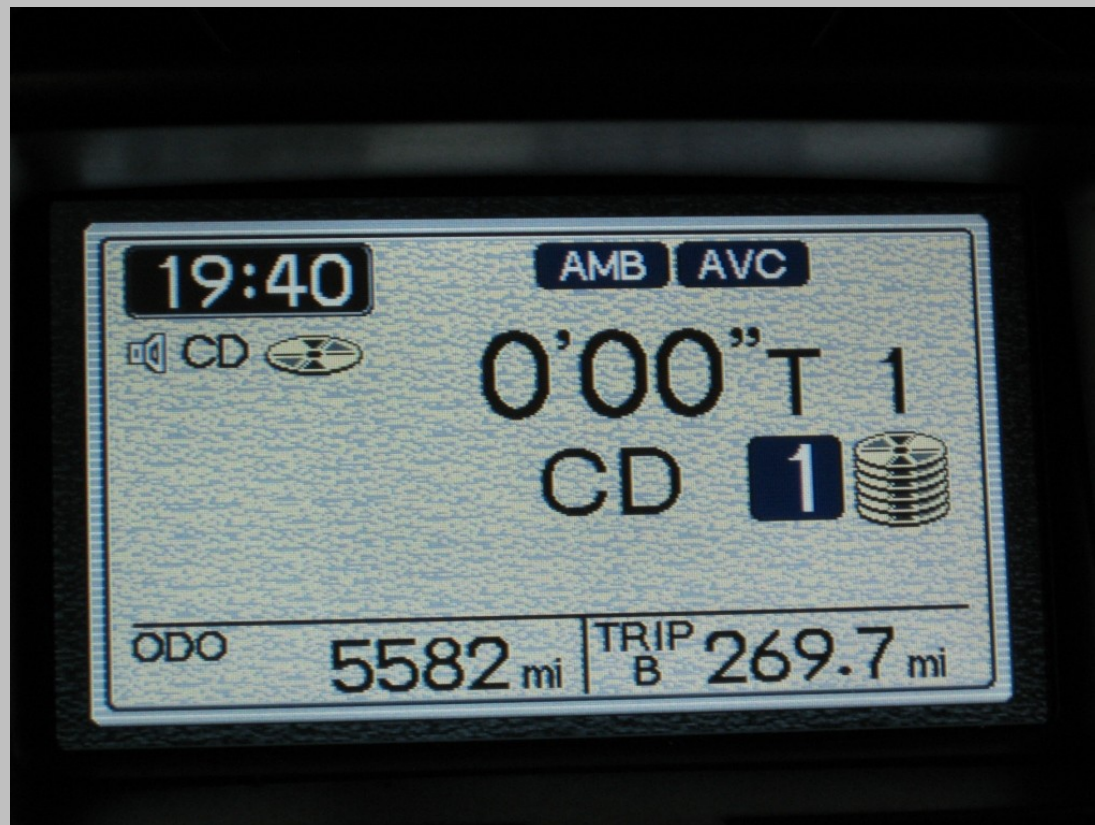

15. By pushing up on then releasing the Tune/Disc switch on left handlebar the IPOD advances to the next song.



15. If you push up and hold on the Tune/Disc switch on left handlebar it will advance to the next Disc.





When CD 1 is displayed you are in the Simple mode described in the GROM User Manual.

IPOD below shows simple mode on IPOD



When you advance to disc # 2 or higher you are  
in the Advanced mode as described in the  
GROM User Manual  
IPOD below show advanced mode display.

